😑 11 00 209 Oil change, engine, with filter

+ 11 00 611

Preparatory work


Removing rear left footrest plate and oil filler panel

Core activity


(-) Changing engine oil with filter

▶ Draining off all engine oil

 Remove screw (1) with sealing ring (2) and drain off the oil into a suitable container.

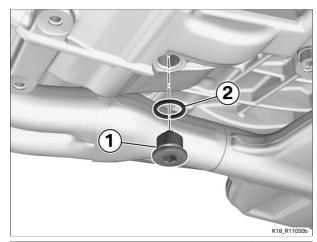

- Remove screw (1) with sealing ring (2).
- Remove oil dipstick (3) and drain the oil into a suitable container.
- Remove oil strainer (4) and sealing rings (5).

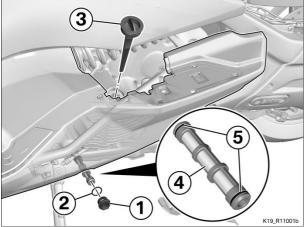



- 1114661 K18,R11052b
- Remove oil filter (1), using oil filter wrench (No. 11 4 661).
- Allow all the oil to drain off.
- Clean the sealing face (arrow).
- Install new oil filter (1), using oil filter wrench (No. 11 4 661).


Tightening torques		
Oil filter to engine		
Lubricate seal with engine oil	11 Nm	

• Install screw (1) with new sealing ring (2).

 032013

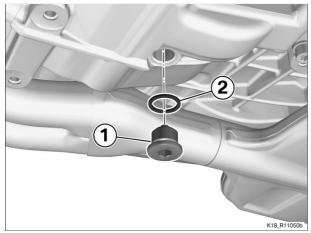




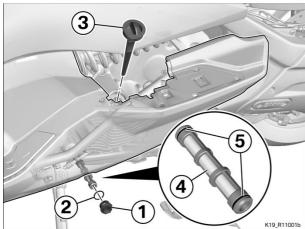


- Clean oil strainer (4), check sealing rings (5); replace if necessary.
- Install oil strainer (4).
- Install screw (1) with sealing ring (2).

Tightening torques			
Threaded plug to crankcase/gearbox cover			
M20 x 1.5	15 Nm		

Pour in correct quantity of engine oil and install dipstick (3).

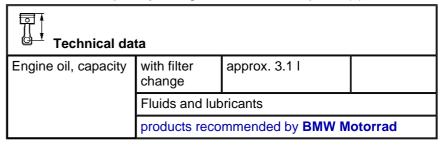

- After completing work, check the engine oil level; adjust as necessary:
- Engine at regular operating temperature
- Place the Maxi-Scooter on its centre stand
- Allow the engine to idle for one minute
- Switch off the engine
- Remove the oil dipstick and seat it on oil filler opening, but do not engage the threads.
- Check the oil level on the oil dipstick.

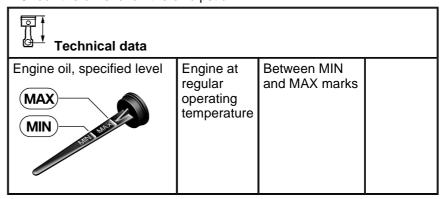

032013 2/3

Finishing work

Installing rear left footrest plate and oil filler panel Final check of work performed

032013 3/3